

How to build V92-V94



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V92-V94

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

- 1 Special pallet.
It is not possible to use standard pallets.



- 2 Turn the container around and put it on the pallet. The corners of the container will be fixed over pallet in all four corners.



- 3A Mandatory!
Push all four corners of the container, stick the corner lists through the holes.



How to build V92-V94



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V92-V94

October 2023


Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

- 3B The corner lists shall be standing at the corners of the pallet.




- 4 Optional accessories
If using the opening.

If the opening will be unsealed during packaging, put the side support to the side and lock it with the support holder. When closing the opening, move the side support to middle and secure the plank over the edge of the opening. You need four support holders rubber bands and four side supports.

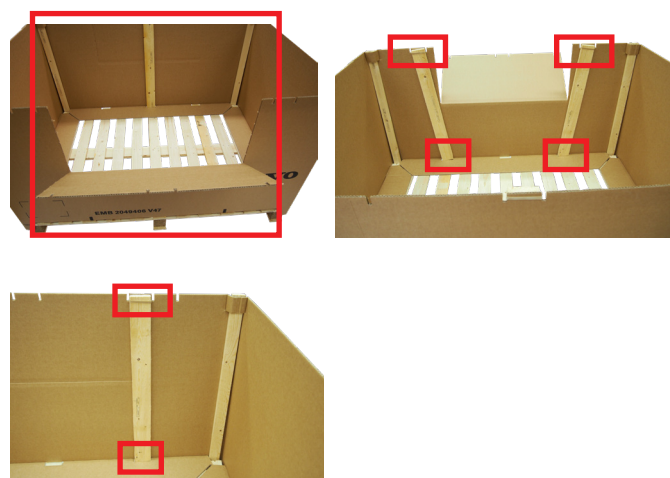

- 5 Put one side support in the middle hole at the center of the opening, there shall be 3 side supports at this side when the opening has been opened.

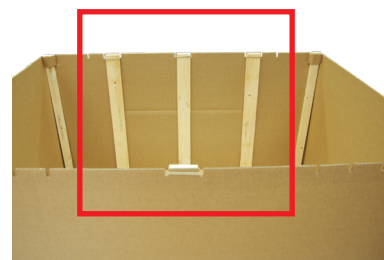

How to build V92-V94



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V92-V94

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.


- 6 Turn the lid upside down, fold the edges and lock all four corners.



- 7 Mandatory!
Put the lid sheet, article number 2072719 into the lid and push it to lock.



- 8 Put the lid over the container and strap it with two straps, use marks on the box as guideline.

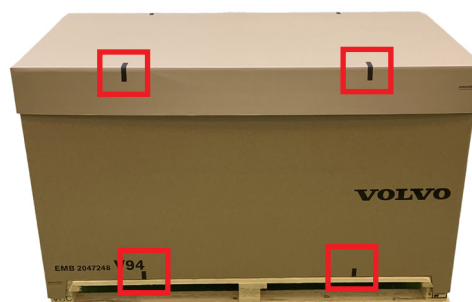



How to build V92-V94

FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V92-V94

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

1 PCE 1 PCE 4 PCS 1 PCE 1 PCE

2047257 V92 2049853 V92 2037792 2047249 2072719

 V94 2047248 V94 2040233

Observe! You must add one lid sheet 2072719 into lid 2047249.

Name	Art.No	Inside	Outside	MOQ
Wooden Pallet V9	2047257	-	1490x800x135	1
Container V92	2049853	1463x774x390	1477x788x397	52
Container Cornerlist L2/ V-assort. size2	2037792	-	416x48x19	208
Container V94	2047248	1463x774x780	1477x788x787	52
Container Cornerlist L4/ V-assort. size4	2040233	-	806x48x19	208
Containerlid V9	2047249	1478x792x150	1490x800x154	104
Container Lid Sheet V9	2072719	-	1478x792	208
Side support Height 2	2040736	-	394x75x19	208
Side support Height 4	2040738	-	784x75x19	208
Support holder Rubber band	6769376	-	-	220

